0-775-20 - Volvo FH(4) &FM(4) camera connections with and without touchscreen (TS) monitor

0-773-20 - VOIVOTTI(47 & IVI(4) Camera connections with and w		(-, -			
* To use this cable , the vehicle must have Volvo video switcher (VS) installed ,VS will be found bellow the central fuse box in the centre of the dashboard .	Function	0-775-20 wire color	Connector with touch screen(TS)	Connector without touch screen(TS)	
	camera1 power	red	blue pin9	blue pin9	
*30-way blue connector (Fig.2) may be required for connection to VS (Volvo part number 3962003)	camera1 ground	black	green pin2	bluepin19	
*5-way green connector (Volvo part number 978305) (Fig.1) may be required for connection to TS (via a 5-pin housing in Volvo loom marked XCB67) , Housing can be found near the VS	camera1 logic	blue	blue pin8	blue pin8	
	camera1 video	yellow	green pin1	blue pin5	
*VS may require programming by Volvo to enable cameras	camera2 power	red	blue pin13	blue pin13	
*Camera 1 video and ground are connected via the green connector to the TS ,all other cameras are to the VS as before	camera2 ground	black	blue pin18	blue pin18	
	camera2 logic	blue	blue pin14	blue pin14	
	camera2 video	yellow	blue pin4	blue pin4	
Location of VS (light blue 30 way connector). 5-way housing (marked XCB67) found in loom near VS.	camera3 power	red	blue pin12	blue pin12	
	camera3 ground	black	blue pin17	blue pin17	
	camera3 logic	blue	blue pin24	blue pin24	
Fig 1 Fig 2	camera3 video	yellow	blue pin3	blue pin3	
PINE PINE 14	camera4 power	red	blue pin10	blue pin10	
	camera4 ground	black	blue pin16	blue pin16	
	camera4 logic	blue	blue pin11	blue pin11	
	camera4 video	yellow	blue pin24	blue pin24	

 <u></u>