

DEFENDER (2020+) A PILLAR MOUNTING KIT (FOR UTILITY-25)

FITTING INSTRUCTIONS



TECHNICAL SUPPORT

aaron@lazerlamps.com / sales@lazerlamps.com +44 (0)1992 945601 / +44 (0)1992 677374

WHAT'S INCLUDED

- 2x A Pillar Mounting Bracket (LH/RH)
- M6 Fasteners

ALSO REQUIRED

- 2x Utility-25
- 1x Two-Lamp Harness (2L-UT-500)

DIFFICULTY LEVEL



TOOLS REQUIRED



WIRE















PRE-INSTALLATION CHECKS

Ensure battery is disconnected.

INSTALLATION





STEP 1

Remove the A Pillar trim screw cover using a plastic trim tool.





STEP 2

Once the trim is removed, it will expose the T30 torx screw.

Undo the T30 Torx screw.



STEP 3

Remove the bracket on the Utility-25's.





STEP 4

Install the Utility-25 mounting bracket to the A Pillar brackets as shown using the supplied bolt, nyloc nut and washer.



INSTALLATION CONTINUED.





STEP 5

Mount the Lamp onto the Utility-25 mount and tuck the lamps cable as shown.



STEP 6

Place the A Pillar mount where you removed the A Pillar trim screw cover.



STEP 7

Tuck the lamps cable into the engine bay using a plastic trim tool.



STEP 8

Use the included bolt's to secure the A Pillar bracket's to the vehicle's A Pillar.




STEP 9

Insert the black plastic bolt cover to conceal the silver bolt (both sides).




WIRING

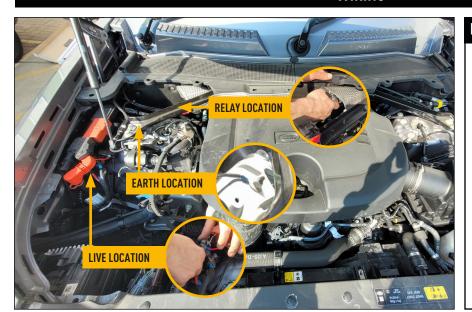

LAZER WIRING KIT

Mount the relay and connect the live and earth connections.

Tidy-up all wiring using cable ties.

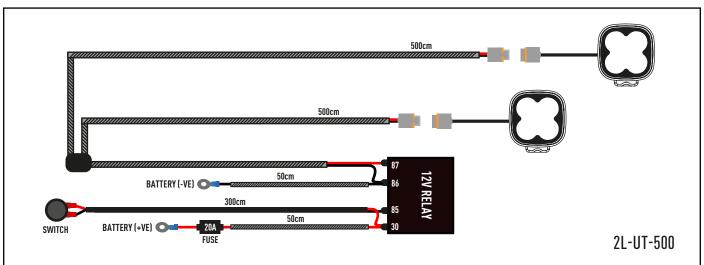





WIRING WITH SWITCH

Run the switch cable through the factory grommet.

Drill a 20mm hole and install the switch (recommended switch location shown).



WWW.LAZERLAMPS.COM

+44 (0)1992 677374 sales@lazerlamps.com

Lazer Lamps Ltd, Units 1&2 Harlow Mill Business Centre, Riverway, Harlow, Essex. CM20 2FD. United Kingdom





